
Piston Bottom Outlet Valves

KOLBENVENTILE



SchuFINFETTEROLF

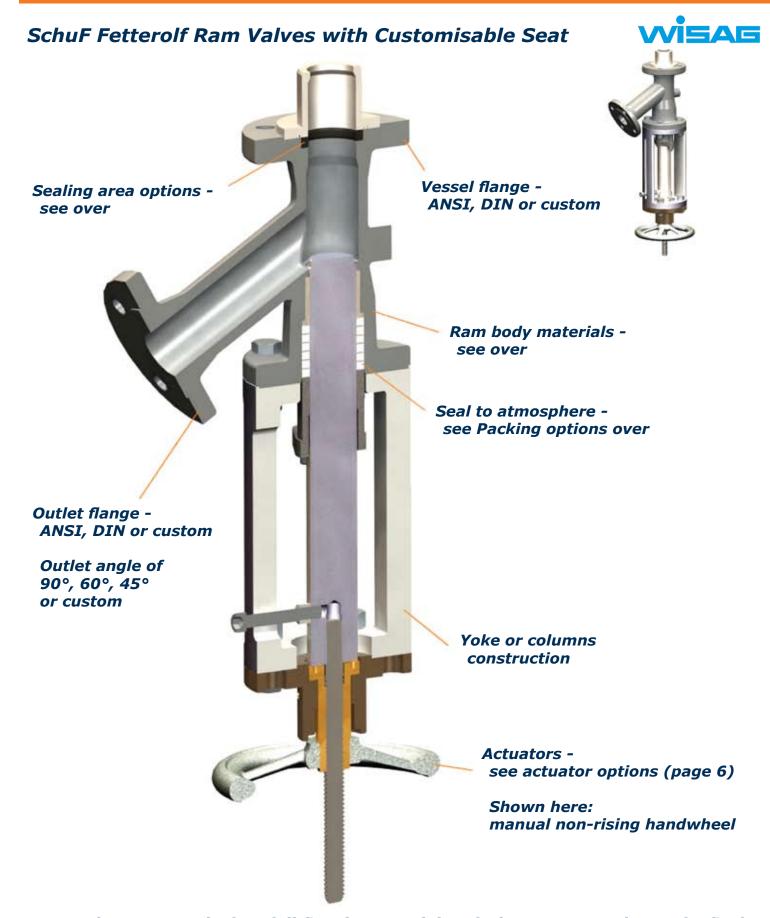


Ram Valves are used when full flow is essential to drain reactors and vessels, flush pipelines, inject media such as kill gases and catalysts and take large samples.


SchuF Fetterolf offers the widest range of design and sealing arrangements for every application. Please contact one of our offices or local agents for advice.



SchuF Fetterolf Ram Valves with Customisable Seat - Options

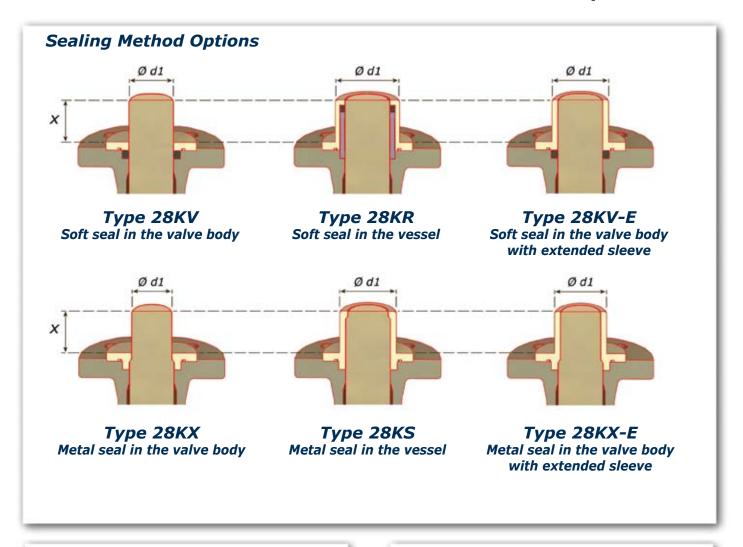

Valve Seal to Atmosphere Options

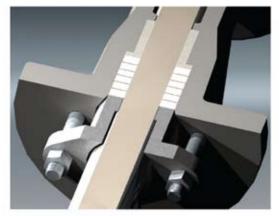


Packing rings are tightened with the stuffing-box gland to give a radial seal to atmosphere around the ram.

Packing rings can be ordered in PTFE or graphite (high temperature / FIRE SAFE) forms or even in a mix of both.

More specialized packing arrangements are available, including Chevron/PTFE and Garlock/Graphite sealing sets.

Valve Materials of Construction

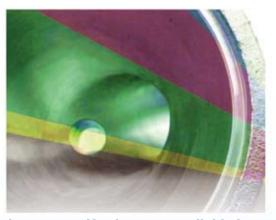


SchuF Fetterolf valves are available in many different materials to suit the customer and the process. The valve bodies and trim can be supplied in stainless steel, carbon steel, Hastelloy, Inconel, nickel or titanium.

Internal lining can be supplied in PTFE, PFA, rubber or glass. Surfaces can also be ordered with specific coating: Stelliting, titanium-nitriding, Canadizing, Kolsterising, chrome-plating and others.


SchuF Fetterolf Ram Valves with Integrated Seat



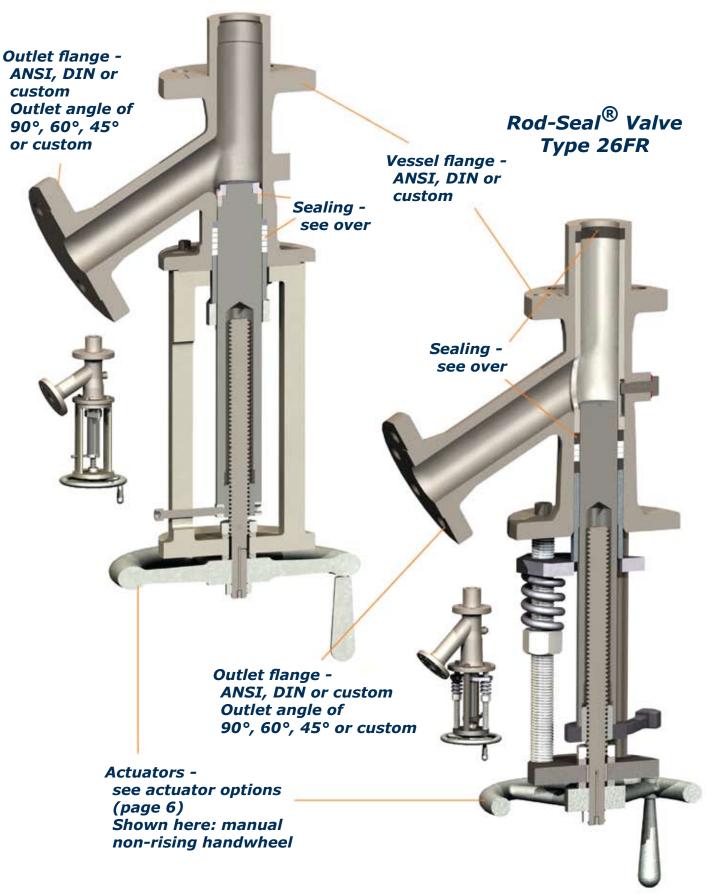


SchuF Fetterolf Ram Valves with Integrated Seat - Options

Ram-Seal[®] Valve Sealing Method Options -Sealing ring: Ti or TFE

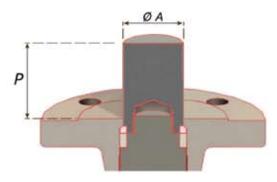


Type 28FX
Extended Plunger

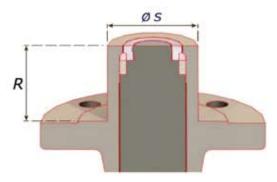


Type 28FS Extended Body

Ram-Seal[®] Valve Sealing to Atmosphere -Options

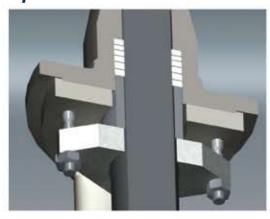


Ram-Seal® valves use packing rings for sealing to atmosphere. The packing rings are tightened using the stuffing-box gland to give a radial seal to atmosphere around the ram. Packing rings can be ordered in TVE/KEV or Graphite (suitable for high temperature or FIRE SAFE operation) or even in a mix of both. More specialized packing arrangements are available, including Chevron PTFE or Garlock graphite sealing sets.

Rod-Seal[®] Valve Sealing Method Options -Sealing ring: plain or encapsulated

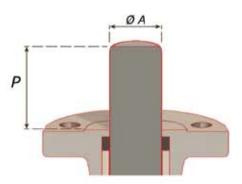

Type 26FV Extended Plunger

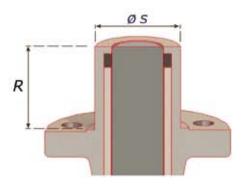

Type 26FR Extended Body

Rod-Seal[®] Valve Sealing to Atmosphere -Super Closure



Rod-Seal[®] valves offer the unique Super Closure feature. A cross-head component, mounted at the end of the ram, compresses the stuffing-box gland only when the valve is fully closed. Thus, all the forces of actuation are carried by the guide bush to the packing rings and the radial seal at the top of the valve. This increased closing power ensures a tight shut-off to the process and the atmosphere. This sealing force eases when opening the valve.

SchuF Fetterolf Ram Valve Actuation - Options



SchuF Fetterolf Valves can be supplied with all options shown and later retrofitted to suit. For example, upgrading from a manual to a pneumatic actuator.

SchuF Fetterolf Ram Valve with Accessories



Main Valve Body

Columns


Full Automatic Control

Main Valve Pneumatic Actuator, Double-Acting or Spring-Returned

> In addition to the features shown SchuF Fetterolf can offer the following options:

- Jacketing
- Temperature Sensoring
- FIRE SAFE Certification
- FDA Compliant Materials
- Flushing / Purging Connections
- Internally / Externally Polished
- Hard Facings
- Contoured Rams

Schuf | Setterolf Worldwide

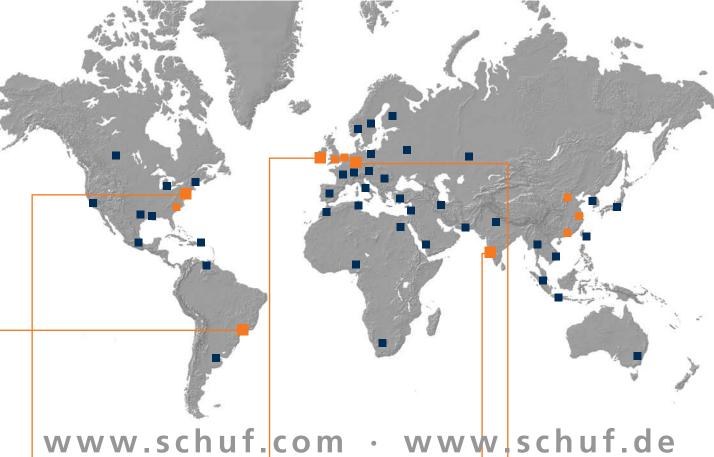

USA

BRAZIL

Fetterolf Corporation, Inc. phone: +1 610 584-1500 fax: +1 610 584-5904 info@fetterolfvalves.com

SchuF (USA) Inc. phone: +1 843 881 3345 fax: +1 843 881 6121 sales@schuf.us



SchuF Valve Technology GmbH phone: +353 (0)21 4837000 fax: +353 (0)21 4837030 sales@schuf.ie

RMANY



SchuF Chemieventile Vertriebs GmbH phone: +49 (0)6198 571100 fax: +49 (0)6198 571200 verkauf@schuf.de



Fetterolf SchuF do Brazil Ltda phone: +55 19 3936 9090 fax: +55 19 39353215 fbvendas@fetterolf.com.br

Your Local Agent:



Wissenschaftliche Apparaturen und Industrieanlagen AG Bruggacherstrasse 24 CH-8117 Fällanden Tel. 044 317 57 57 Fax 044 317 57 77 http://www.wisag.ch e-mail: info@wisag.ch



SchuF Speciality Valves India Pvt. Ltd. phone: +91 421 2264600 fax: +91 421 2362018 sales@schuf-india.com